

OTHER 63029G AMCOM SUPPLEMENT
MIL-PRF-63029G DTD AND FOSI SUPPLEMENT

HOW TO USE THE

ARMY'S MIL-PRF-63029G DTD AND FOSI(S) Version 5.4

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

U.S. ARMY AVIATION AND MISSILE COMMAND

12 DECEMBER 2012

LIST OF EFFECTIVE PAGES

Insert the latest changed pages in accordance with the instructions on the transmittal sheet.

NOTE: On a changed page, the portion of the text affected by the latest change is indicated by a vertical line in the outer margin of the page. Changes to illustrations are indicated by a letter suffix adjacent to the identification number. Added or completely revised chapters, sections, paragraphs, tables, etc., are indicated by a vertical line by the title.

Dates of issue for original and change pages are:

Original 12 DECEMBER 2012

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 15, CONSISTING OF THE FOLLOWING:

Page No.	*Change No.	Page No.	*Change No.
Cover	0	2-1	0
A	0	2-2	0
B Blank	0	2-3	0
i	0	2-4	0
1-1	0	2-5	0
1-2 Blank	0		

*Zero in this column indicates an original page.

A/(B blank)

**MIL-PRF-63029G DTD and FOSI Supplement
HOW TO USE THE**

ARMY'S MIL-PRF-63029G DTD AND FOSI(S) Version 5.4

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

Beneficial comments (recommendations, additions, deletions) and any pertinent data which may be of use in improving this documentation should be addressed to: Commander, U.S. Army Aviation and Missile Command (AMCOM), ATTN: AMSAM-MSS-LP (LEACH), Redstone Arsenal, AL 35898-5000 or e-mail to: Allissa.Leach@us.army.mil.

TABLE OF CONTENTS

	Page
CHAPTER 1 general information	1-1
Section I Scope	1-1
Section II Applicable Documents	1-1
Section III Identifying Errors or Issues	1-1
Section IV Installing DTD, Entities, FOSI and Fonts	1-1
CHAPTER 2 CREATING MANUALS	2-1
Section I Graphics	2-1
Section II Touch Up and Process Instructions	2-1
Section III Elements and Attributes	2-1
Section IV Special Tagging Instructions	2-4
Section V Multi-Volume Manuals (63029G Only)	2-5

LIST OF ILLUSTRATIONS

Figure	Title	Page
Circle Fonts		2-4

LIST OF TABLES

Number	Title	Page
2-1	Element to Attribute Matrix	2-1

CHAPTER 1 GENERAL INFORMATION

SECTION I. SCOPE

This supplement will address the changes to the 3 DTDs, 63029G-Common entities, and 3 FOSIs supplied by AMCOM. The DTD and FOSIs are CL, MTF, and Dash10. Authorization of any suggested changes to the DTD must be authorized by AMCOM, IMMC Publication Services.

SECTION II. APPLICABLE DOCUMENTS

The requirements to develop TMs are to adhere to the standards set forth in MIL-PRF-63029G, AR 25-30, and AR 25-40.

SECTION III. IDENTIFYING ERRORS OR ISSUES

Submittal of problems or recommended changes to the DTD and FOSI should use the layout as described below. The more detail and narrative you provide the better we can understand your issues.

Element Name	<inspec-form>
Sample XML	See attached XML file named: problem-inspec-form.xml and sample PDF
Narrative and Description of Problem or Recommended Change	Your name, Your Organization Name and Address, Phone Number and/or DSN Number
POC E-mail Address	Your E-mail Address

SECTION IV. INSTALLING DTD, ENTITIES, FOSI AND FONTS

1-1. FILE LOCATIONS.

a. DTD and FOSI. Arbortext's working structure requires a custom¥doctypes folder in which each DTD will have its own folder with the same name as the DTD (without the .dtd extension). The 63029G entity files and 63029Common.ent file are to be placed in the custom¥entities¥63029Gentities folder.

b. Common Graphics. The caution and warning graphics as well as the emergency border graphics are to be placed directly in the custom¥graphics folder.

1-2. SETTING UP CIRCLE FONTS To install the circle fonts required for co-pilot responsible steps, the following 3 circle font files must be placed in the C:¥WINDOWS¥fonts directory. Windows will automatically run the install to recognize the font set.

1. circlealph.ttf
2. circleNum.ttf
3. circlefont.ttf

These files can be downloaded from the pubswab DTD-n-FOSI website.

CHAPTER 2 CREATING MANUALS

SECTION I. GRAPHICS

NOTE

As a rule of thumb, make sure the Graphic size for graphics are full page, ½ page, ¼ page, or 1/8 page of at least 600 DPI. Determine the size of the graphic by measuring from the top of the graphic to the bottom. More than one illustration may be placed in the designated graphic area. The illustrator should design the graphic to fit the given dimension. Shrinking and enlarging may lose clarity of the illustration.

Reference the document titled "Printer_Setting_for_CGM_Graphics.PDF. This document illustrates how to verify the settings for your printer to properly output an EPIC generated PDF that has CGM graphics. Contact your System Administrator to modify your printer settings.

SECTION II. TOUCH UP AND PROCESS INSTRUCTIONS

2-1. Touchup (Process instruction or PI) should be used cautiously. Before using PIs in Arbortext, consult Publication Services DTD/FOSI team. Refer to Section III to submit a problem report to the Publication Services DTD/FOSI administrator.

SECTION III. ELEMENTS AND ATTRIBUTES.

2-2. ATTRIBUTES DEFINED.

1. Column 1: DTD — denotes the DTD the element is in.
2. Column 2: Element Name
3. Column 3: Attribute Name. An asterisk (*) denotes the attribute is required.
4. Column 4: Explanation of the content of the attribute and how it is used by the FOSI.

Table 2-1. Element to Attribute Matrix

Table 2-1. Element to Attribute Matrix — Continued

(1) DTD	(2) Element	(3) Attribute Name	(4) Content	
ALL: CL, Dash10 and MTF	conditioncont conditionnew Step1 Step2 Step3 Step4 Step5 Step6 Step7 Check Sub-Check	Pgbrk	=1, Starts a new page	
		Circle-CoPilotResponsible	=1 to create circled step number or letter designating the co-pilot as responsible for that step. Refer to chart of symbols for required label entry method.	
		O-IfInstalled	=1 to display "O" prefix	
		F-FlightEngineer	=1 to display "F" prefix	
		Star-InChecklist	=1 to display a star prefix	
		I-MandinstrumFlight	=1 to display "I" prefix	
		Asterisk-ThroughFlights	=1 to display "*" prefix	
		N-NightFlights	=1 to display "N" prefix	
		T-OperatorManual	=1 to display "T" prefix	
		Dbl-AsteriskMandTestFlt	=1 to display "***" prefix	
		Label	If Circle-CoPilotResponsible = 0, the label is the step number	
		NOTE See MIL-PRF-63029 or the last page of this document for sample list of circle fonts.		
			Subpara1 Subpara2 Subpara3 Subpara4 Subpara5 Subpara6 Subpara7	Pgbrk
Pgnumber	If needed, new page number			
Chglevel	Change level number, i.e., "5"			
type	=epg denotes even page			
	=opg denotes odd page			
	=npg denote next page			
	conditionnew		Starts a sequence of grouped conditions beginning with a <para> and then step "1".	
	conditioncont		Allows an introductory <para> and then continues the step numbering of the condition.	
	designator	desig	Used to provide text that is to be reverse video, i.e. <designator desig="EH"> displays EH in reverse video.	
	emphasis	type	= bold	

Table 2-1. Element to Attribute Matrix — Continued

(1) DTD	(2) Element	(3) Attribute Name	(4) Content
MTF	ListOfCharts		List of Charts
	ListOfProcedures		List of procedures
	Special-Procedure specialprocs	Pgbrk	=1 starts a new page
		Pgnumber	New page number
		Chglevel	Change level number
		type	=epg denotes even page =opg denotes odd page =npg denote next page
	CL	alternatedcl	
standardcl			Output will be 4.5in x 8in standard CheckList (CL)
engine bailout electrical emergency fire flightctrls fuel geninfo hydraulic landditch missionequip normal otherprocs perfddata proprotor thruflight check subcheck		AuthoredTitle	Text entered here will override the standard title.
		blankpgchglvl	= change level
		blankpgnum	= change level
		Chglevel	Change number
		delchlvl	Not used
		id	Cross reference ID of the element
		Inshchlvl	Not used
		Label	Not used
		Pgrk	=0 default
			=1 starts a new page
		pgnumber	Page Number used in concert with the attribute pgbrk
		pagetype	= select the page type from this list: bodypg, n-bodypg, body-landpg, emergpg,, perfddata-figpg,, foldout17, foldout25, foldout35, foldout45, or rear
		revchg	=0 Denotes no revision
			=1 Denotes Revision

SECTION IV. SPECIAL TAGGING INSTRUCTIONS

2-3. STEP FORMAT. To indicate a step that the co-pilot is responsible to complete, a circle must be around the step number/letter. The <step> attribute **Circle-CoPilotResponsible** is set to 1 and the **label** is set to the corresponding entry according to . The following diagram is an explanation of how to generate the number or letter with a circle.

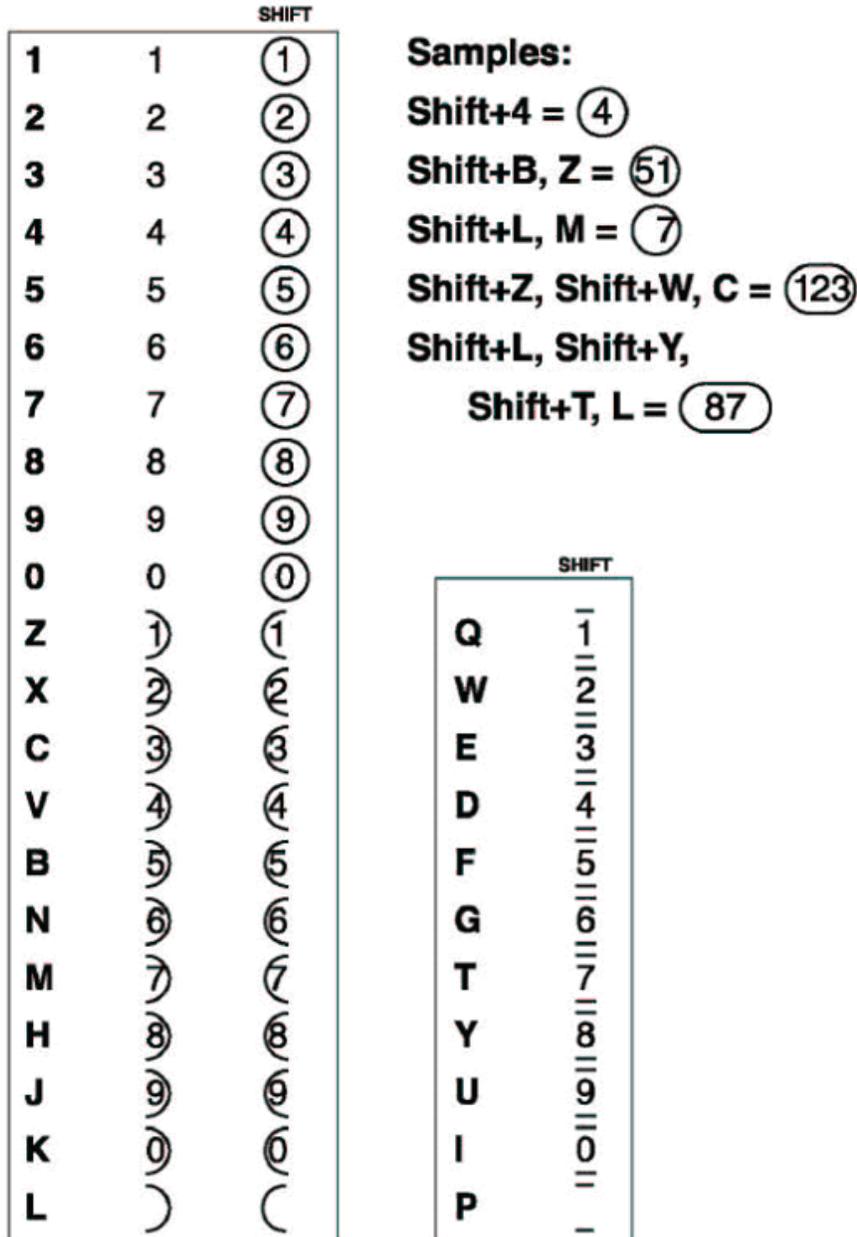


Figure . Circle Fonts

SECTION V. MULTI-VOLUME MANUALS (63029G ONLY)

NOTE

Volumes have only been enabled in the Operator's Manual in the 63029G version.

2-4. IDENTIFYING MULTI-VOLUMES. The <volnum> tag immediately follows <tmidno> and shall have the volume number inserted in it if the publication is multi-volume. This field is inserted to identify that the manual is a multivolume book and that particular volume's number. To begin the next volume, the <volumerear> tag is used to indicate the end of one volume and <volumefront> tag indicates the beginning of the next volume.

2-5. FRONT MATTER.

NOTE

When tagged accurately, the autogenerated listings (LEP, TOC, and Index) will display correctly in 2-volume manuals, but are required to be manually tagged in 3-volume manuals.

The first volume of a multi-volume Operator's Manual, will begin with the regular <front> tag. This will signal to the stylesheet that the automatically generated LEP and TOC shall include the entire manual.

The remainder of the volumes will begin with the <volumefront> tag. The <volumefront> tag will indicate to the system that the TOC and LEP will be only for that volume.

a. Table of Contents. The TOC requires an <auto> tag for autogenerated listing.

b. List of Effective Pages. The required tag, <totalpgct> inserts the page count in the standard "Total Number of Pages..." statement. The LEP is autogenerated when the <auto> tag is inserted, or can be manually tagged by choosing <lepentry>.

2-6. REAR MATTER. The ending of a volume is identified by inserting the <volumerear> or <rear> tag.

a. Index <index>. The index in the <volumerear> matter shall be the index for that volume. The index in the <rear> matter shall be the entire publication index. Either of these <index> listings may be autogenerated by using the <auto> tag or manually entered by using the <indexhd> for alphabet headers and <indexentry> for each entry. The <indexentry> is broken down into <topic> and <pgreference> with <sub-entry> available for further breakdown.

b. Additional Rear Matter. Each volume is allowed to have foldouts using the <foldsect> tag.